

TRI

TR-5000 Series 手冊

E.軟體工具

E-1 軟體工具

E-1-1 BOARD SELECT

E-1-1-1 BOARD SELECT

E-1-1-2 BOARD SELECT – BARCODE/ID

E-1-1-3 BOARD SELECT – REMOTE

E-1-2 ADD NEW BOARD

E-1-3 AUTO STAMP

E-1-4 THE PIN FAULT GRADING TEST

E-1-5 DISPLAY BIOS VERSION

E-1-6 NON SKIP TEST PROGRAM CHECK

E-1-7 READ NEXT BARCODE IN TESTING

E-1-8 VECTORLESS LIBRARY FOR CLAMPING DIODE AND TESTJET

E-1-9 FIXTURE COUNT ALARM

E-1-10 CHECK FIXTURE POSITION BY NAIL 31,32

E-1-11 AUTO BARCODE SCAN IN EDIT PANEL

E-1-12 FIXTURE CHECK

E-1-13 DISPLAY DLL VERSION NUMBER AND DATE

E-1-14 TEST PROGRAM MODIFY LOG FILE

E-1-15 MODIFY CHECK REPORT

E-1-16 TEST PROGRAM FIELD AUTHORITY

E-1-17 USE ABSOLUTE VALUE FOR HIGH/LOW LIMITATION

E-2 AUTO LINK

E-2-1 AOI 設定: (TR7100)

E-2-2 AOI 設定: (TR7100EP)

E-2-3 AOI AUTO LINK 功能說明

E-2-3 ICT/ATE 設定

E-2-4 ICT/ATE AUTO LINK 功能說明

E-2-5 AOI REPAIR STATION 設定

E-2-6 AOI REPAIR STATION ALARM 功能說明